



*Driven Valve Cover 13-15 Honda Grom*

*Part#: DGVC-XX*

**INSTALLATION INSTRUCTIONS**

**Removal**

1. Remove oem valve covers.

**Installation**

1. Using the oem bolts and o ring install the driven racing valve covers.
2. Torque to oem specifications.

**METAL THAT MOVES YOU**



*Driven Valve Cover 13-15 Honda Grom*

*Part#: DGVC-XX*

**INSTALLATION INSTRUCTIONS**

**Removal**

1. Remove oem valve covers.

**Installation**

1. Using the oem bolts and o ring install the driven racing valve covers.
2. Torque to oem specifications.

**METAL THAT MOVES YOU**



*Driven Valve Cover 13-15 Honda Grom*

*Part#: DGVC-XX*

**INSTALLATION INSTRUCTIONS**

**Removal**

1. Remove oem valve covers.

**Installation**

1. Using the oem bolts and o ring install the driven racing valve covers.
2. Torque to oem specifications.

**METAL THAT MOVES YOU**



*Driven Valve Cover 13-15 Honda Grom*

*Part#: DGVC-XX*

**INSTALLATION INSTRUCTIONS**

**Removal**

1. Remove oem valve covers.

**Installation**

1. Using the oem bolts and o ring install the driven racing valve covers.
2. Torque to oem specifications.

**METAL THAT MOVES YOU**