FOR OFF ROAD/RACE USE ONLY!

Part#:DHFCB-KT01 (DRIVEN HALO FUEL BASE/CAP) INSTALLATION INSTRUCTIONS

DRIVEN PERFORMANCE PRODUCTS WWW.DRIVENRACING.COM 866-5-DRIVEN

- 1. Make sure you have all of the required parts for installation. (see checklist below)
- 2. Remove stock (OEM) fuel cap.
- 3. On all bikes listed above you will be re-using the OEM vent system. The Halo Base will only replace the aluminum ring.
- 4. Separate aluminum ring from plastic vent system/base by removing the bolts.
- 5. Install OEM gasket and plastic vent system following by the Driven Halo base.
- 6. Make sure both base and cap gaskets are installed.
- 7. Install the screws into the fuel cap and tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws. Install the ¼ turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise

*Note: If you wish to use the OE rubber trim, trimming will be required on some models.

TOOLS REQUIRED

- 4mm Hex Key
- 3mm Hex Key (Honda)
- Blue (#242) Loctite

TORQUE SPECS AND INFO

All Hardware: 6FT/LB

PARTS CHECKLIST

- Halo Cap
- Halo Base
- O-Ring (installed on Halo cap)
- Gasket (installed on Halo base)
- Hardware (all necessary hardware)



THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*

FOR OFF ROAD/RACE USE ONLY!



Part#:DHFCB-KT01 (DRIVEN HALO FUEL BASE/CAP) INSTALLATION INSTRUCTIONS

1. Make sure you have all of the required parts for installation. (see checklist below)

- 2. Remove stock (OEM) fuel cap.
- 3. On all bikes listed above you will be re-using the OEM vent system. The Halo Base will only replace the aluminum ring.
- 4. Separate aluminum ring from plastic vent system/base by removing the bolts
- 5. Install OEM gasket and plastic vent system following by the Driven Halo base
- 6. Make sure both base and cap gaskets are installed.
- 7. Install the screws into the fuel cap and tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws. Install the 1/4 turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise.

TOOLS REQUIRED

- 4mm Hex Key
- 3mm Hex Key (Honda)
- Blue (#242) Loctite

TORQUE SPECS AND INFO

All Hardware: 6FT/LB

PARTS CHECKLIST

- Halo Cap
- Halo Base
 - O-Ring (installed on Halo cap)
- Gasket (installed on Halo base)
- Hardware (all necessary hardware)



WWW.DRIVENRACING.COM

866-5-DRIVEN

THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*



Remove 3 philips screws from metal cap and remove metal cap.

Plastic base would be re-used in the installation process.



Remove 3 philips screws from metal cap and remove metal cap.

Plastic base would be re-used in the installation process.