FOR OFF ROAD/RACE USE ONLY!

Part#:DHFCB-SU02-XX/DHFC (DRIVEN HALO FUEL BASE/CAP) INSTALLATION INSTRUCTIONS

NOTE: These instructions apply to DHFCB-SU02

1. Make sure you have all of the required parts for installation. (see checklist below)

- 2. Remove stock (oem) gas cap ring
- 3. Remove stock (OEM) tank cowel and fuel cap .
- 4. Install adapter plate into tank .
- 5. reinstall gas tank cowel into tank

6. Install Halo gas cap into the adapter plate tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws. Install the ¼ turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise.

*Note: If you wish to use the OE rubber trim, trimming will be required on some models.

TOOLS REQUIRED

- 4mm Hex Key
- 3mm Hex Key (Honda)
- Blue (#242) Loctite

TORQUE SPECS AND INFO

All Hardware: 6FT/LB

PARTS CHECKLIST

- Halo Cap
- Halo Base

.

- O-Ring (installed on Halo cap)
- Gasket (installed on Halo base)
- Hardware (all necessary hardware)
- Adapter plate



THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*

FOR OFF ROAD/RACE USE ONLY!

Part#:DHFCB-SU02-XX/DHFC (DRIVEN HALO FUEL BASE/CAP) INSTALLATION INSTRUCTIONS

NOTE: These instructions apply to DHFCB-SU02

- 1. Make sure you have all of the required parts for installation. (see checklist below)
- 2. Remove stock (oem) gas cap ring
- 3. Remove stock (OEM) tank cowel and fuel cap .
- 4. Install adapter plate into tank .
- 5. reinstall gas tank cowel into tank .

6. Install Halo gas cap into the adapter plate tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws. Install the ¼ turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise.

*Note: If you wish to use the OE rubber trim, trimming will be required on some models.

TOOLS REQUIRED

PARTS CHECKLIST

- 4mm Hex Key
- 3mm Hex Key (Honda)
- Blue (#242) Loctite

TORQUE SPECS AND INFO All Hardware: 6FT/LB

- Halo Cap
- Halo Base
- O-Ring (installed on Halo cap)
- Gasket (installed on Halo base)
- Hardware (all necessary hardware)



THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*



DRIVEN PERFORMANCE PRODUCTS WWW.DRIVENRACING.COM 866-5-DRIVEN

DRIVEN PERFORMANCE PRODUCTS WWW.DRIVENRACING.COM 866-5-DRIVEN