## FOR OFF ROAD/RACE USE ONLY!



# Part#:DHFCB-XX-XX/DHFC (DRIVEN HALO FUEL BASE/CAP) INSTALLATION INSTRUCTIONS

DRIVEN PERFORMANCE PRODUCTS WWW.DRIVENRACING.COM 866-5-DRIVEN

NOTE: These instructions apply to DHFCB-KA(01, 02), DHFCB-SU(01), DHFCB-YA(01), DHFCB-HO(01, 02, 03, 04), DHFCB-KT, DHFCB-DU(03)

- 1. Make sure you have all of the required parts for installation. (see checklist below)
- 2. Remove stock (OEM) fuel cap.
- 3. Make sure both base and cap gaskets are installed.
- 4. Install the screws into the fuel cap and tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws. Install the ¼ turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise.

#### **TOOLS REQUIRED**

- 4mm Hex Key
- 3mm Hex Key (Honda)
- Blue (#242) Loctite

## TORQUE SPECS AND INFO

All Hardware: 6FT/LB

#### PARTS CHECKLIST

- Halo Cap
- Halo Base
- O-Ring (installed on Halo cap)
- · Gasket (installed on Halo base)
- Hardware (all necessary hardware)



THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN\*

# FOR OFF ROAD/RACE USE ONLY!





DRIVEN PERFORMANCE PRODUCTS
WWW.DRIVENRACING.COM
866-5-DRIVEN

NOTE: These instructions apply to DHFCB-KA(01, 02), DHFCB-SU(01), DHFCB-YA(01), DHFCB-HO(01, 02, 03, 04), DHFCB-KT, DHFCB-DU(03)

- 1. Make sure you have all of the required parts for installation. (see checklist below)
- 2. Remove stock (OEM) fuel cap.
- 3. Make sure both base and cap gaskets are installed.
- 4. Install the screws into the fuel cap and tighten to 6 FT/LB. It is highly recommended to use blue Loctite while installing these screws. Install the ¼ turn cap by pushing down and turning clockwise until it locks into place. You can release the cap by pushing down and turning it counter-clockwise.

#### **TOOLS REQUIRED**

- 4mm Hex Key
- 3mm Hex Key (Honda)
- Blue (#242) Loctite

### TORQUE SPECS AND INFO

All Hardware: 6FT/LB

#### PARTS CHECKLIST

- Halo Cap
- Halo Base
- O-Ring (installed on Halo cap)
- Gasket (installed on Halo base)
- Hardware (all necessary hardware)



THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN\*