


# VALVE STEM INSTALLATION

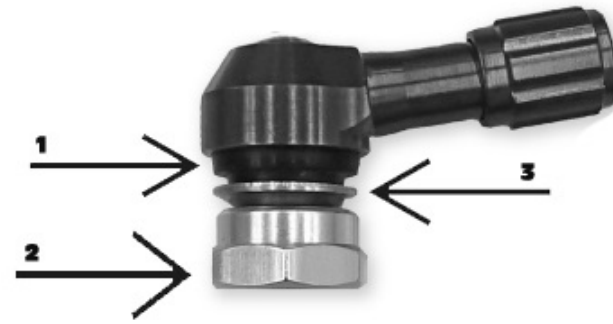

- 1. Rubber gasket
- 2. Lock nut. (torque to 4 ft/lb w blue locktite)
- 3. Washer



## Removal:

1. REMOVE THE ORIGINAL VALVE STEM USING A VALVE STEM REMOVAL TOOL OR A SCREW DRIVER. BE CAREFUL NOT TO DAMAGE THE RIM.



## Installation:

1. Clean the hole area install The driven racing valve stem making sure you have the correct size and torque down to 4 ft/lbs with locktite. Install tire and make sure there are no air leaks. ( USE A 14MM SOCKET AND TORQUE WRENCH)



## NOTE:

1. ALWAYS MOUNT THE OUTLET OPPOSITE SIDE OF KICK STAND