

FOR OFF ROAD/RACE USE ONLY!



Driven TT Rearsets for Yamaha R-1 09-14

Part#: DRP-711

INSTALLATION INSTRUCTIONS

Removal

1. Remove left side (shifter side) frame bracket.
2. Remove shift lever.
3. On the right side (brake side) remove exhaust hanger bolt.
4. Remove right side frame bracket.
5. Remove master cylinder plunger pin (save the cotter pin).
6. Remove master cylinder from frame bracket.

TOOLS REQUIRED

- 8mm Open End Wrench
- 5mm Hex Key
- 6mm Hex Key
- 8mm Hex Key
- Needle Nose Pliers
- Screw Driver
- Blue Loctite
- Impact Gun

THE USE OF BLUE LOCTITE IS REQUIRED ON ALL MOUNTING HARDWARE!

Installation

NOTE: ALL PIVOT POINTS MUST BE TIGHTENED USING BLUE LOCTITE AND AN IMPACT GUN.

To retain the use of the rear brake light switch a separate M10 X 1.25 aftermarket brake light switch (not included) will need to be used.

Brake Side

1. Install master cylinder into left frame bracket.
2. Install master cylinder plunger pin and reuse cotter pin.
3. Install frame bracket to bike.
4. Tighten all bolts (using blue Loctite).
5. When not using the passenger footpeg to mount rear master cylinder reservoir, use part #100203 and M6 Bolt supplied.

Shifter Side

1. Install left side foot peg into frame bracket.
2. Install frame bracket assembly onto bike.
3. Install shift pedal and thread shift rod into both heim joints (left and right).
4. Adjust pedal height to desired position by rotating shift rod.
5. Tighten all bolts and nuts (use blue Loctite).

Note. If "gp shift pattern" is desired rotate shift knuckle 180 degrees.

Make final adjustments as necessary and re-check all hardware after the first 500 miles of use.

TORQUE VALUES

- M5 = 6FT/LBS
- M6 = 10FT/LBS
- M8 = 25FT/LBS
- M10 = 45FT/LBS



Brake Side



Shifter Side

THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*

The logo for Driven, featuring a stylized car wheel and the word "DRIVEN" in a bold, italicized, sans-serif font.

LEFT SIDE / SHIFTER
A00020

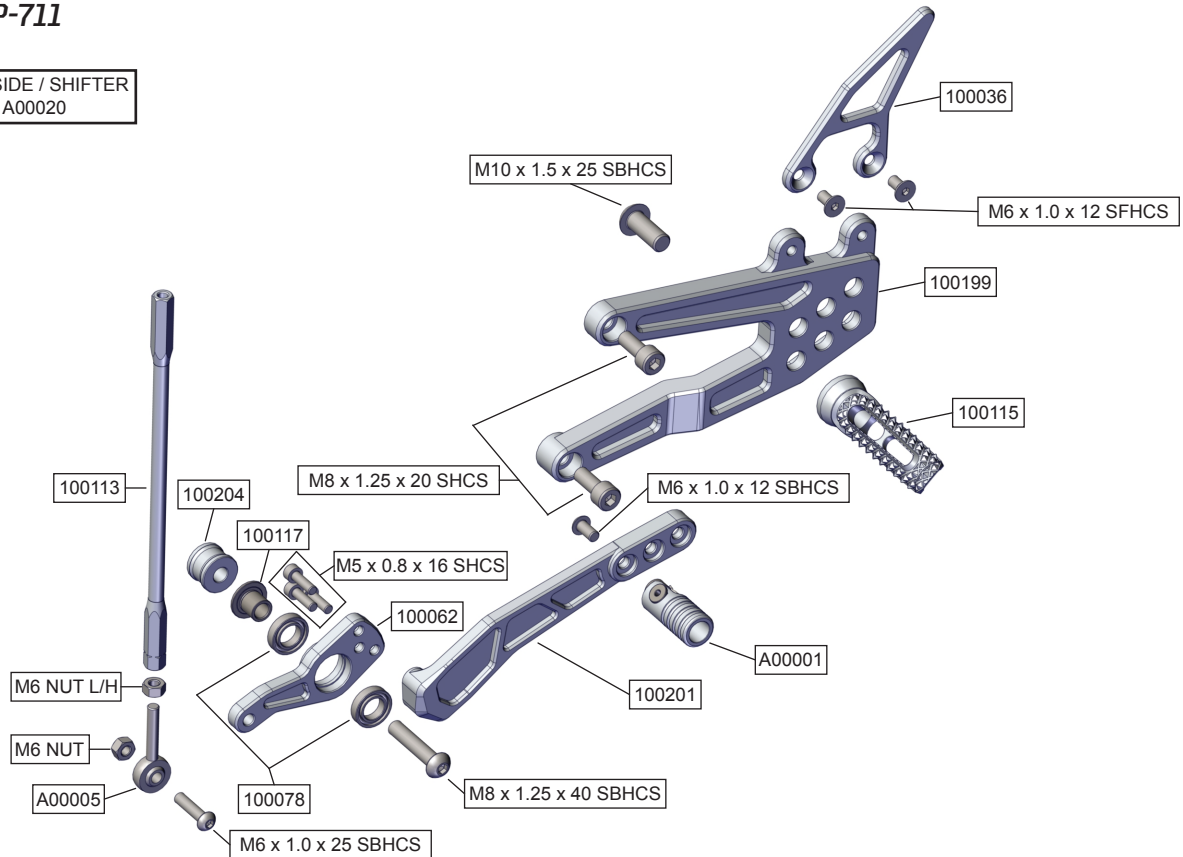


Diagram illustrating the components of a brake assembly, including the main bracket and various fasteners. The components are labeled as follows:

- 100203
- M6 x 1.0 x 10 SBHCS
- 100198
- M6 x 1.0 x 12 SFHCS
- M6 x 1.0 x 20 SHCS
- M6 x 1.0 x 25 SHCS
- 100200
- M8 x 1.25 x 20 SHCS
- M10 x 1.5 x 25 SBHCS
- M8 x 1.25 x 20 SHCS
- M6 x 1.0 x 10 SBHCS
- 100115
- 100078
- 100102
- M8 x 1.25 x 25 SHCS
- M6 x 1.0 x 20 SHCS
- 100202
- 100175
- A00002
- M6 x 1.0 x 12 SBHCS

THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*