FOR OFF ROAD/RACE USE ONLY!

# Driven TT Rearsets for 07-15 Honda CBR 600RR ABS/NON-ABS
# Part#: DRP-713
# INSTALLATION INSTRUCTIONS

## Removal

**Brake Side**
1. Remove m5 bolt holding plastic heat shield.
2. Remove master cylinder from frame plate and brake pedal.
3. Remove frame bracket from bike.

**Shifter Side**
1. Remove shifter.
2. Remove OEM frame plate.
3. Unbolt engine mount nut. (see fig 1)

**THE USE OF BLUE LOCTITE IS REQUIRED ON ALL MOUNTING HARDWARE!**

## Installation

**Brake Side**
1. Install master cylinder to master cylinder bracket.
2. Connect master cylinder bracket to heat shield.
3. Install brake plunger extension to master cylinder and rod end tighten nut with a 12mm and 14mm open end wrenches. (see fig 3)
4. Install foot peg into frame bracket.
5. Connect master cylinder bracket to frame bracket using 2 m6 bolts supplied.
6. Connect frame bracket to bike.
7. Connect brake plunger rod end to brake pedal using oem bolt, washers, nut and split pin.
8. Warning: make sure brake pedal has free play in it!
9. Tighten all bolts using blue loctight.

***TOOLS REQUIRED***

- 8mm Open End Wrench
- 5mm Hex Key
- 6mm Hex Key
- 8mm Hex Key
- Needle Nose Pliers
- Screw Driver
- Blue Loctite
- Impact Gun

**Shifter Side**
1. Install bell crank and stan off to open engine mount bolt. (Use blue loctight and torque to 34ft/lbs)
2. Install foot peg into frame bracket.
3. Install frame bracket to bike using 2 m8 bolts.
4. Install vertical and horizontal shift rod. (5” horizontal and 6 “vertical)
5. Adjust shifting to your preference and tighten nuts.
6. Tighten all bolts using blue loctight.

NOTE: For reverse shifting see fig 2.

***Make final adjustments as necessary and re-check all hardware after the first 500 miles of use.***

**THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN***

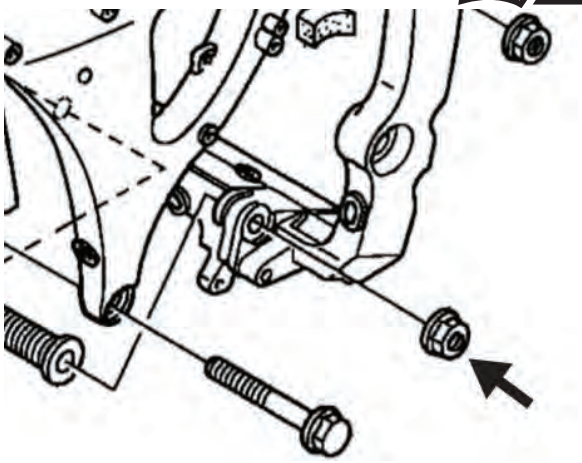


Fig 1.

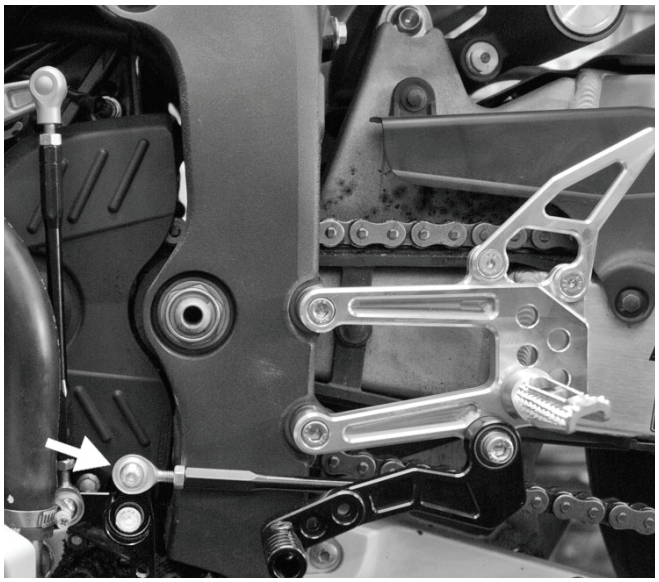


Fig 2. (Reverse Shift)



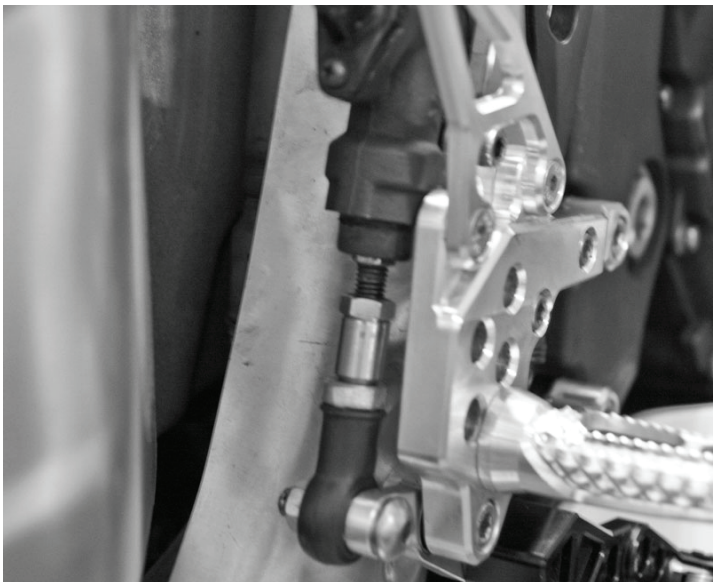


Fig 3.

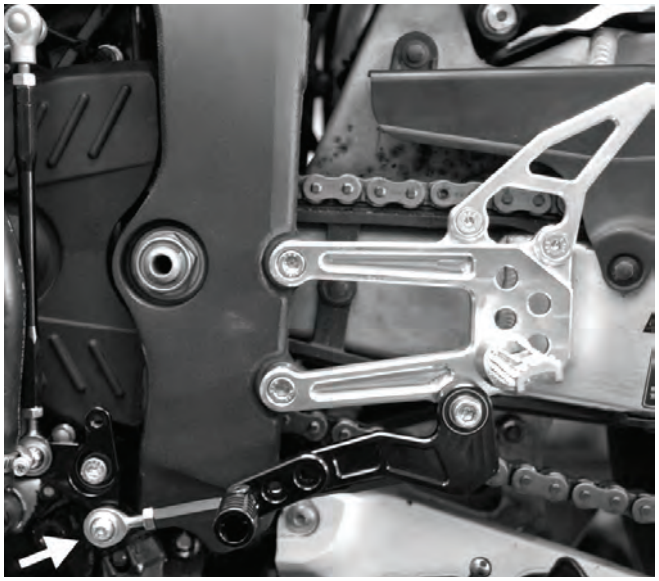

Clutch Side (Standard Shift)

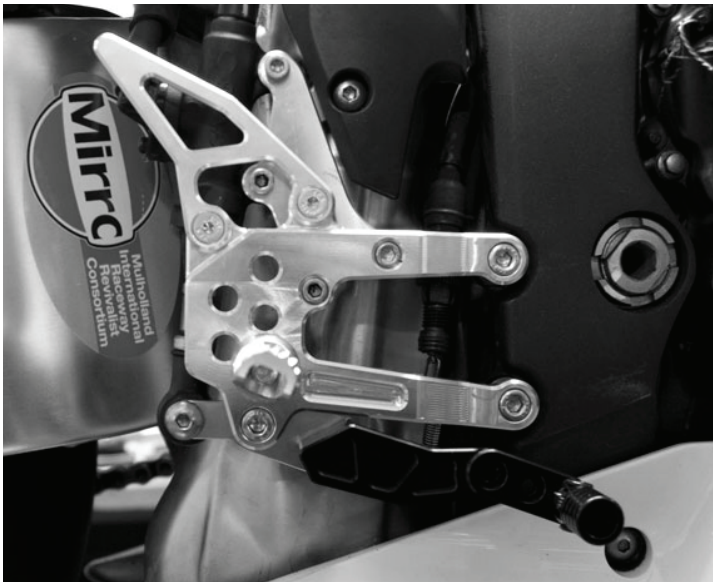



Brake Side


# FOR OFF ROAD/RACE USE ONLY!

## Driven TT Rearsets for Honda 07-15 CBR 600RR ABS/NON-ABS
## Part#: DRP-713

LEFT SIDE / SHIFTER
A00024

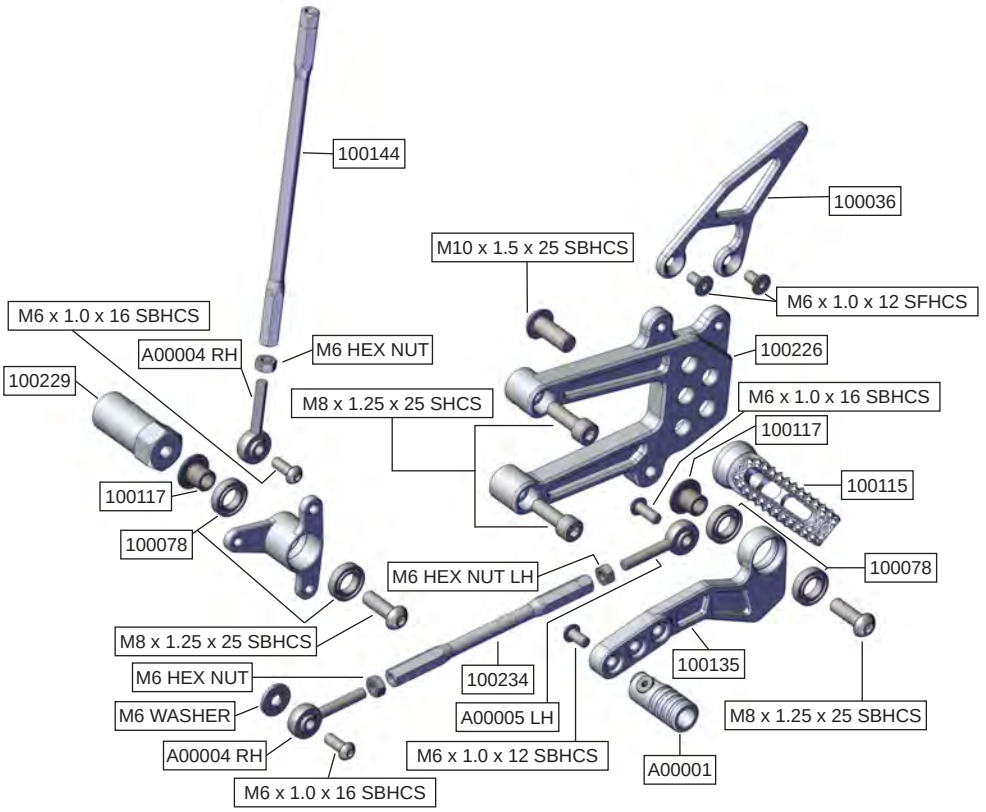


RIGHT SIDE / BRAKE
A00025

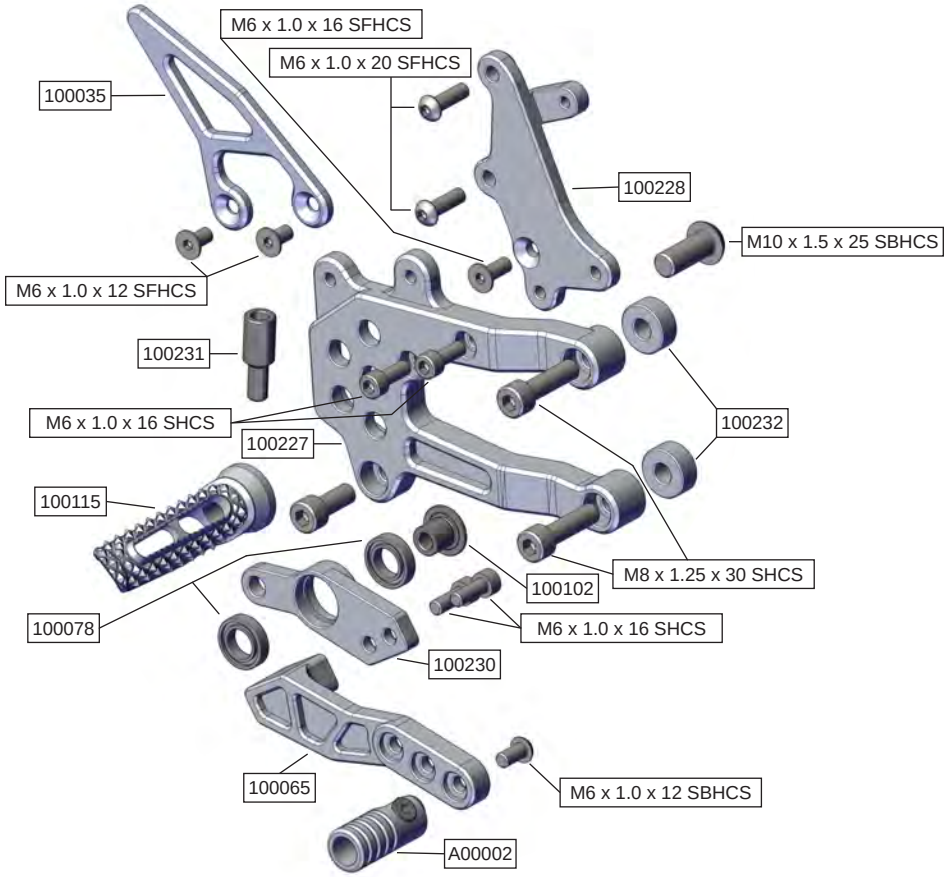


**THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN***