




21 HONDA CBR 1000 RR BLOCK OFF PLATES

1. Remove the hoses from the factory reed covers
2. Remove BOTH the reed covers from the cylinder head
3. Install reed covers with supplied gasket.
4. cap air box with supplied cap

FOR OFF ROAD USE ONLY

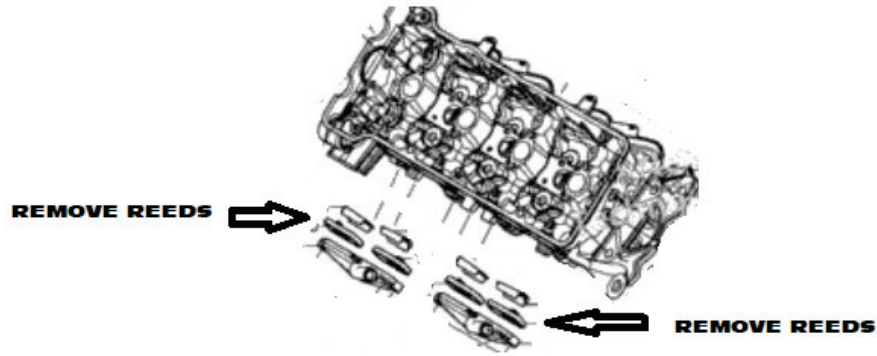

21 HONDA CBR 1000 RR BLOCK OFF PLATES

1. Remove the hoses from the factory reed covers
2. Remove BOTH the reed covers from the cylinder head
3. Install reed cover with supplied gasket.
4. cap air box plug with supplied cap.

FOR OFF ROAD USE ONLY

