
25-26 DUCATI PANIGALE V-2 BLOCKOFF PLATE

1. Remove the hoses from the factory reed cover
2. Remove oem block off cover.
3. Install Driven Racing plate using oem screws.
4. Remove hose from air box and plug with supplied rubber plug.
5. Leave pump pluged to elecrical harness


.

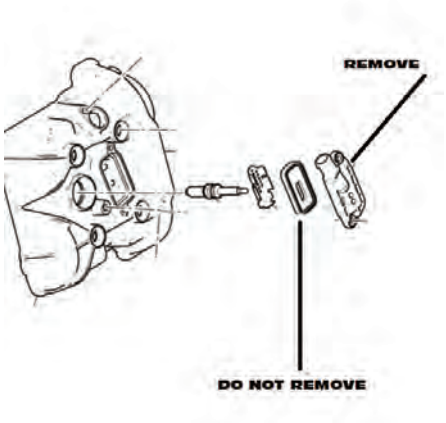

FOR OFF ROAD USE ONLY

25-26 DUCATI PANIGALE V-2 BLOCKOFF PLATE

1. Remove the hoses from the factory reed cover
2. Remove oem block off cover.
3. Install Driven Racing plate using oem screws.
4. Remove hose from air box and plug with supplied rubber plug.
5. Leave pump pluged to elecrical harness

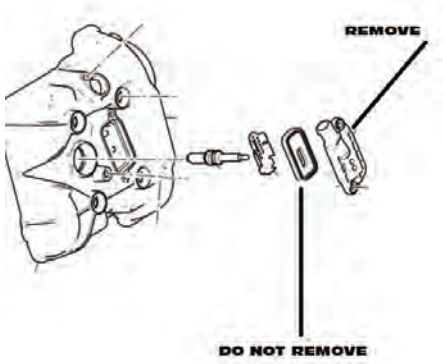

FOR OFF ROAD USE ONLY