

FOR OFF ROAD/RACE USE ONLY!




Part#: DBS-1.25 / DBS-1.00 / DBS-SA
INSTALLATION INSTRUCTIONS

DRIVEN PERFORMANCE PRODUCTS
WWW.DRIVENRACING.COM
866-5-DRIVEN

TOOLS REQUIRED

1. Wire stripper
2. Crimp tool

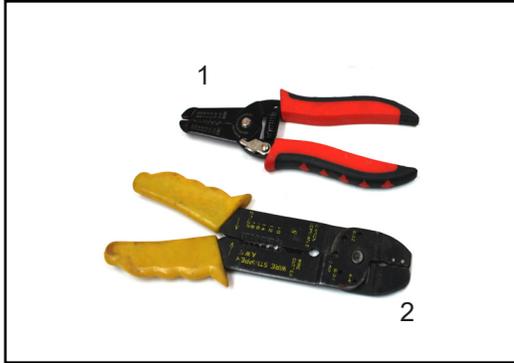

STEPS

1. Remove stock bango bolt
2. Install bango pressure switch
3. Note: you must re bleed your brakes.
4. Connect wire connector (included) to stock harness (see fig 1)
5. Plug into brake pressure switch



THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*

FOR OFF ROAD/RACE USE ONLY!



Part#: DBS-1.25 / DBS-1.00 / DBS-SA
INSTALLATION INSTRUCTIONS

DRIVEN PERFORMANCE PRODUCTS
WWW.DRIVENRACING.COM
866-5-DRIVEN

TOOLS REQUIRED

1. Wire stripper
2. Crimp tool



STEPS

1. Remove stock bango bolt
2. Install bango pressure switch
3. Note: you must re bleed your brakes.
4. Connect wire connector (included) to stock harness (see fig 1)
5. Plug into brake pressure switch



THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*