PHONE MOUNT INSTALLATION

FOR BOLT AND NUT TYPE PHONE MOUNT
Part # DPMB-1,2,3

Installation Instructions

1. *REMOVE OEM NUT/BOLT FIG 1*
2. *REMOVE OEM NUT AND WASHER FIG 2*
3. *INSTALL NUT /BOLT TOURQUE TO 30 FT/LBS USE BLUE LOCKTITE*
4. *USE B TYPE ARM TO CONNECT TO YOUR PHONE CASE /GPS CASE FIG.3*

FIG 1

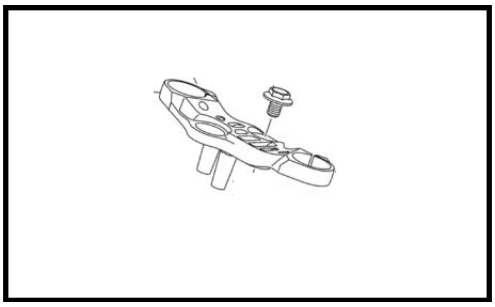


FIG 2



FIG 3



*THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN**

PHONE MOUNT INSTALLATION

FOR BOLT AND NUT TYPE PHONE MOUNT
Part # DPMB-1,2,3

Installation Instructions

1. *REMOVE OEM NUT/BOLT FIG 1*
2. *REMOVE OEM NUT AND WASHER FIG 2*
3. *INSTALL NUT /BOLT TOURQUE TO 30 FT/LBS USE BLUE LOCKTITE*
4. *USE B TYPE ARM TO CONNECT TO YOUR PHONE CASE /GPS CASE FIG.3*

FIG 1

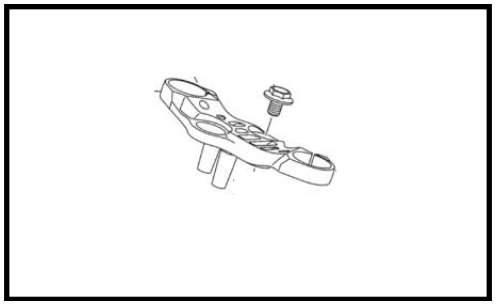


FIG 2



FIG 3



*THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN**