




## FOR OFF ROAD USE ONLY

### Return spring installation.

1. Remove master cylinder from bike
2. Remove clevis and nut/s
3. Carefully install the spring and backup washer.
4. Reinstall nut and clevis (use blue locktite)
5. install master cylinder and check for free play and proper operation.

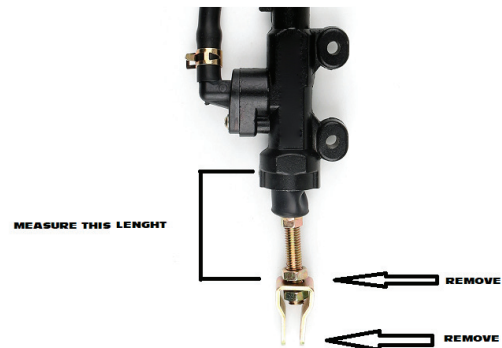


THIS PICTURE IS FOR ILLUSTRATION PURPOSES IF YOU ARE NOT SURE HAVE THIS JOB DONE BY A QUALIFIED MECHANIC



## FOR OFF ROAD USE ONLY

### Return spring installation.

1. Remove master cylinder from bike
2. Remove clevis and nut/s
3. Carefully install the spring and backup washer.
4. Reinstall nut and clevis (use blue locktite)
5. install master cylinder and check for free play and proper operation.

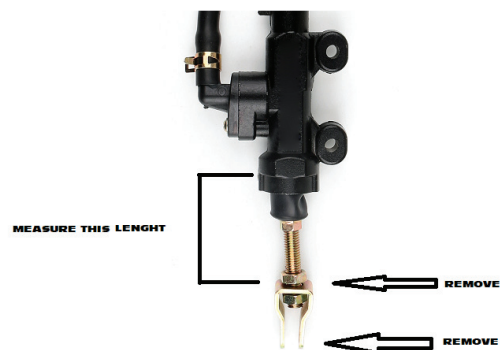

THIS PICTURE IS FOR ILLUSTRATION PURPOSES IF YOU ARE NOT SURE HAVE THIS JOB DONE BY A QUALIFIED MECHANIC